

Door Rail Inner Clamp 200mm - 12mm Glass (Model: KIC1220)



- There must be 5mm space left at both ends for end cap.
- Clean up the glass on both edges for the clamps.
- Separate the inner clamp and remove cover on tape to expose adhesive.
- Put the clamp on the glass and make sure it is edge to edge.
- Tighten bolt and nuts to be level.


Attributes:

Product Code: KIC1220


Unit Of Sale: Each

Swing Door

* Floor Spring or Overhead Concealed door closer must be fitted on the side off longer inner clamp.

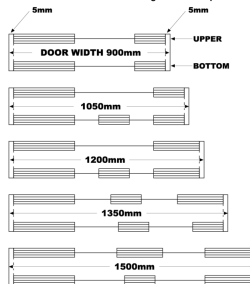

INSTALLATION DATA

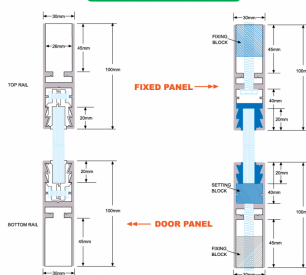

Auto Door (Sliding Door)

* The max. space required between two inner clamps for upper rail is 100mm

